

Multiport for DE3620

FPI # 6186



Flohr Pools

Common Issues

Leaking Out of "Waste" Port

Possible Causes

1. Worn Valve Seat Gasket
2. Worn Spring
3. Pump and return hoses connected to wrong ports

Solutions

1. Replace Valve Seat Gasket #10
2. Replace Multiport Spring #7
3. Double check and switch hoses



Leaking Out Cover Top

Possible Causes

1. Worn Cover O-Ring
2. Worn Shaft O-Rings
3. Worn Valve Seat Gasket

Solutions

1. Replace Cover O-Ring #5
2. Replace Shaft O-Rings #9
3. Replace Valve Seat Gasket #10

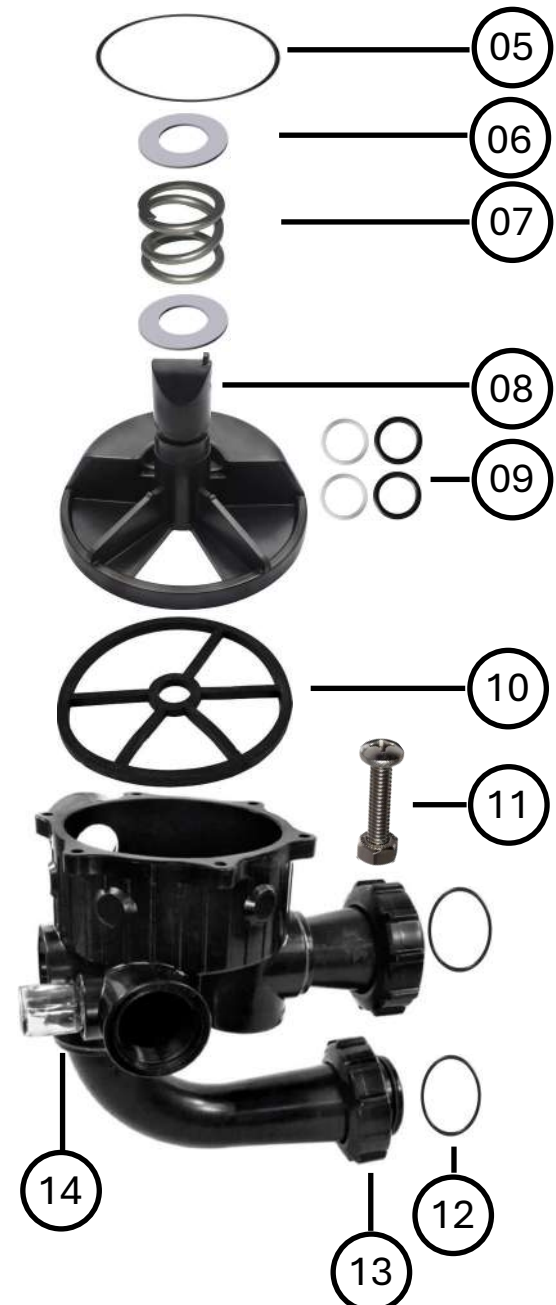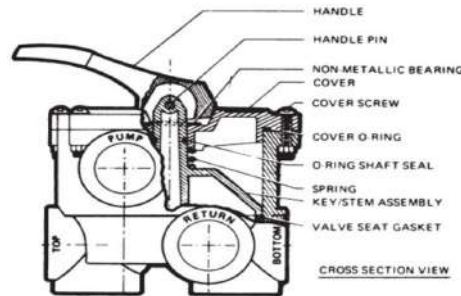

Ref. #	FPI #	Description	Req
1	6031	Handle Pin	1
2	6036	Handle	1
3	6028	Non-Metallic Bearing	1
4	7529	Label (Filter/Backwash)	1
5	6029	Cover O-Ring	1
6	6286	Spring Washers (Set of 2)	2
7	6019	Spring	1
8	6035	Key/Stem Assembly	1
9	6278	Shaft O-Ring	2
10	6095	Valve Seat Gasket	1
11	6027	Cover Screw	6
12	5907	Valve/Union O-Ring	1
13		Union Nut for Multiport	2
14	6026	Sight Glass w/ Gasket	1

How to order parts from Flohr Pools:

- Determine needed part using diagram and chart
- Use the Flohr Pools Number (FPI #) to see if in-stock (likely is)
- If part doesn't have FPI. #, ask salesperson availability to order